


When using a perimeter wire around deck

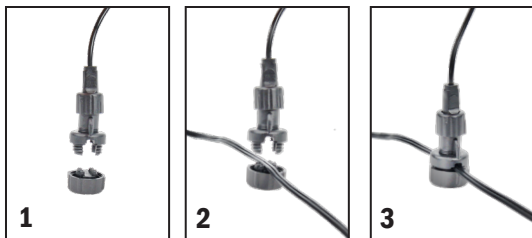

Step 1

Unscrew In-line connector module.

Step 2

Align In-line connector with perimeter wire.

Step 3

Screw In-line connector together until wire is fully pierced and cap fully seated.

Note: Ensure correct wire polarity is maintained during installation

Visit www.dekpromfg.com for more information



ULTRA FIREFLY™ Product Warranty

Should any product fail Ultra Firefly reserves the right to request return of the product, transportation costs pre-paid, for the purpose of inspecting the product to determine validity of the claim. Upon validation of a claim by Ultra™ Manufacturing, replacement will be sent including transportation costs. Code compliance and applicability for intended use is the responsibility of purchaser / installer.

EXCEPT AS OTHERWISE PROVIDED, Ultra™ Manufacturing MAKES NO OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY IS NOT TRANSFERABLE.

Ultra™ Manufacturing's liability is discharged upon repair or replacement of defective product. Ultra™ Manufacturing will not be responsible for cost of removal and reinstallation or accidental and consequential damages. Damages resulting from misuse, abuse, alteration, negligence or accidents are not covered under this warranty.

For full warranty coverage details visit www.ultrafence.com



Ultra Aluminum Manufacturing Inc.
2124 Grand Commerce Drive
Howell, MI 48855
1-800-656-4420

INS-FF-QUICKCONNECT