


# RHG15-ILBKIT- 1.5" Secondary Rail Bracket Kit INSTALLATION



Pre-drill holes with a  
13/64" drill bit and put  
Type F screw in rail.

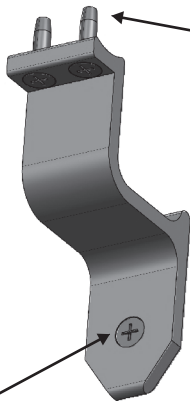

*Screw head - #3 Phillips*

Pre-drill a hole with a 13/64" drill bit  
and put Type F screw in ADA post.

